

SECTION C

THE COOLING SYSTEM

	<i>Section</i>
Draining and flushing the system	C.3
Fan belt	C.6
Frost precautions	C.9
Lubrication	C.1
Radiator	C.5
Expansion tank	C.5
Filler cap	C.2
Temperature gauge	C.8
Thermostat	C.4
Water pump	C.7

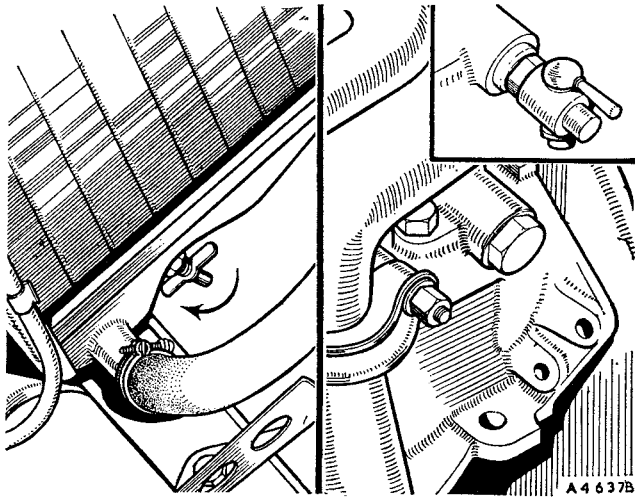


Fig. C.1

(Left) Access to the radiator drain tap is gained from beneath the front of the car. (Early cars only)

(Right) The drain tap or plug (later models) for the cylinder block is located on the right-hand side of the block at the rear

Section C.1

LUBRICATION

Early cars

Remove the plug from the water pump body and add a small quantity of one of the recommended greases. Do not pressure lubricate the water pump, or the seal may be damaged.

Later cars

The greasing plug has been deleted from the water pump as no lubrication is required.

Section C.2

RADIATOR FILLER CAP

The cooling system is under appreciable pressure while the engine is hot, and the radiator filler cap must be removed very carefully or left in position until the water has cooled.

If it is necessary to remove the filler cap when the engine is hot it is absolutely essential to remove it gradually, and the filler spout is provided with a specially shaped cam to enable this to be done easily.

Unscrew the cap slowly till the retaining tongues are felt to engage the small lobes on the end of the filler spout cam, and wait until the pressure in the radiator is fully released before finally removing the cap.

It is advisable to protect the hand against escaping steam when removing the cap.

C.2

Section C.3

DRAINING AND FLUSHING THE SYSTEM

Early cars

Draining

Remove the radiator header tank filler cap.

Open both drain points (see Fig. C.1) and the heater tap.

Flushing (See Editor's note at end of Section C.)

To ensure efficient circulation of the coolant and to reduce the formation of scale and sediment in the radiator the system should be periodically flushed with clean running water. The water should be allowed to run through until it comes out clear from the drain tap. This service is preferably carried out before adding anti-freeze in the autumn, and again when the anti-freeze is drained off for the summer.

If furring is excessive, remove the radiator as in Section C.5 and flush through in the reverse way to the flow, i.e. turn the radiator upside-down and let the water flow in through the bottom hose connection and out through the top. The use of radiator reverse-flush adaptor 18G 187 with a 1 in. (25.4 mm.) diameter water hose is recommended for this purpose.

Refilling

Close the drain points but leave the heater tap open.

Ensure that the water hose clips are tightened.

Fill the system through the filler in the radiator header tank until the water is up to the level indicator strip.

Check that the heater unit is completely full by disconnecting the heater outlet pipe.

Avoid overfilling when anti-freeze is in use to prevent unnecessary loss on expansion.

Screw the filler cap firmly into position.

The cooling system is unsuitable for use with anti-freeze mixtures having an alcohol base owing to the high temperatures attained in the top tank. Only anti-freeze mixtures of the ethylene glycol or glycerine type should be employed.

Later cars

Draining

(1) Remove the radiator filler plug.

(2) Remove drain plug from the radiator return pipe. To drain the cooling system on cars not fitted with drain taps or plugs, slacken the hose clip and remove the bottom hose at its connection to the radiator.

(3) Remove cylinder block drain plug.

Flushing

(4) Carry out operations (1) to (3).

(5) Insert a hose pipe into the radiator filler plug orifice and allow water to pass through the system until clean water flows from both drain points.

Filling

(6) Refit both drain plugs.

(7) Open the heater water valve.

(8) Fill the system through the radiator filler orifice and fit the filler plug.

- (9) Top up the expansion tank to the half-full point and refit the expansion tank cap.
- (10) Run the engine at a fast idle speed for approximately 30 seconds.
- (11) Stop the engine and top up the system through the radiator filler.
- (12) Refit the filler plug and run the engine until normal operating temperature is reached.
- (13) Stop the engine and allow the system to cool.
- (14) When the system has cooled, remove the expansion tank cap, and top up the tank to the half-full point.
- (15) Refit the expansion tank cap.

Section C.4

THERMOSTAT

Removing

Drain the cooling system (Section C.3). Disconnect the outlet hose from the outlet elbow. Remove the securing nuts and spring washers from the thermostat cover and lift the cover away from its studs. Remove the paper joint washer and lift out the thermostat.

Examine the thermostat for damage and check that the valve is in the closed position. If the thermostat is damaged or the valve is in the open position, renew the thermostat.

To test the thermostat, immerse it in water heated to the temperature marked on the thermostat, the valve will open if the thermostat is functioning correctly. If the valve fails to open renew the thermostat.

IMPORTANT. In warm climates where the thermostat is removed as a permanent measure, it is essential that a thermostat blanking sleeve is fitted. Failure to fit a sleeve will result in higher operating temperatures and possible damage.

Refitting

Installation of the thermostat assembly is the reverse of the removal procedure. Fit a new paper joint washer if the existing one is damaged.

Section C.5

RADIATOR AND EXPANSION TANK

Radiator—early cars

Removing

Drain the cooling system (see Section C.3). Release the hose clip on the thermostat housing and remove the hose from the housing extension. Remove the radiator bottom hose by releasing the clips on the bottom radiator connection. Remove the fresh air induction pipe from its connection on the front cowling. Remove the temperature gauge thermal element from the right-hand side of the radiator. Remove the bolts which secure the radiator to the support brackets and remove the radiator.

Refitting

Reverse the removal procedure.

Radiator—later cars

Removing

- (1) Drain the cooling system (Section C.3).
- (2) Remove the radiator grille (Section R.3).
- (3) Disconnect the top, bottom, and expansion hoses from the radiator connections.
- (4) Remove the two nuts and screws securing the top radiator cowl plate to the body.
- (5) Slacken the two nuts and screws securing the bottom radiator cowl plate to the body.
- (6) Remove the four radiator side securing bolts.
- (7) Lift out the radiator complete with cowl.
- (8) Disconnect the return hose from the cylinder block.
- (9) Remove the two bolts securing the radiator bottom return pipe and remove the pipe complete with hoses.

Refitting

- (10) Reverse the removing procedure then refill the cooling system.

Expansion tank

Removing

- (1) Remove the filler cap.
- (2) Disconnect the spill hose from the radiator connection.
- (3) Unscrew the tank mounting screws and remove the expansion tank complete with spill hose.

Refitting

- (4) Reverse the removing procedure in (2) and (3), half fill the tank with coolant and refit the filler cap.

Section C.6

FAN BELT

Adjusting

To adjust the dynamo and fan belt tension slacken the two dynamo pivot bolts, release the bolt on the slotted adjusting link, and raise the dynamo bodily until the belt tension is correct. Tighten the bolts with the dynamo held in this position. A gentle hand-pull only must be exerted on the dynamo, otherwise the tension will be excessive and undue strain will be thrown on the dynamo bearings.

The belt should be sufficiently tight to prevent slip, yet it must be possible to move it laterally about 1 in. (2.54 cm.) at the centre of its longest run.

Removing

Slacken the dynamo pivot and adjusting link bolts. Push the dynamo down, release the belt from the crankshaft pulley, and remove the belt.